

Seicane S018801 Mercedes-Benz SLK W171 R171 aftermarket radio dvd gps stereo upgrade installation replacement instruction

Seicane S018801 Mercedes-Benz SLK W171 R171 head unit after installation



Some tips before the installation:

1. Please disconnect the power before the installation.
2. Please prepare a lever and a screwdriver before the removal and the installation.
3. Please keep all the separate parts from the car. Please take great care of the dashboard to avoid scratching it during its detachment and installation. Please keep handy any parts from the car and make use of all the original screws from the car as much as possible. so each related part of the unit can be fixed securely.
4. For your convenience, here's the recommended tools for removal and installation from Seicane, please check for more details:

<http://www.seicane.com/car-dvd-dismantling-device-srd-400>

Mercedes-Benz SLK W171 R171 head unit installation guide

1. Open the little box beneath the radio and remove the screws with a screwdriver.



2. Pry the trim panel on the right side of the box with a removal tool, after that, remove it.



3. Remove the screw with a screwdriver.




4. Pry the leather surrounding the brake, then pull it up, at last, remove it.



5. Remove the trim panel under the brake with your hands.



6. Disconnect the connectors behind the trim.

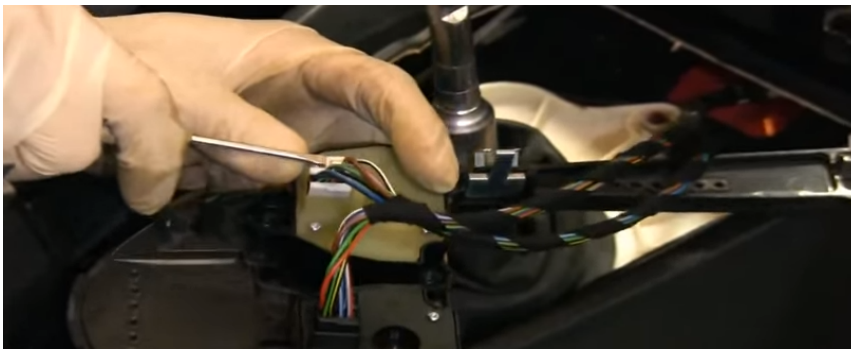

7. Take the box out of the dashboard.



8. Disconnect the connectors behind the box.



9. Remove the trim panel on the box with your hands.



10. Disconnect the connectors at the back of the trim panel.



11. Remove two screwdrivers inside the trim panel.



12. Take another box under the radio with your hands.



13. Disconnect all the connectors at the back of the box.



14. Remove two screws after taking away the box with a screwdriver.



15. Pop out the disc player.



16. Remove the screws at both sides of the disc player.



17. Take the disc player out of the dashboard.



18. Remove two screws holding the radio with a screwdriver.



19. Take the radio out of the dashboard.




20. Disconnect all the connectors at the back of the radio.



21. Check all the accessories for the new Seicane head unit.



22. Connect the harnesses to the back of the new Seicane head unit.

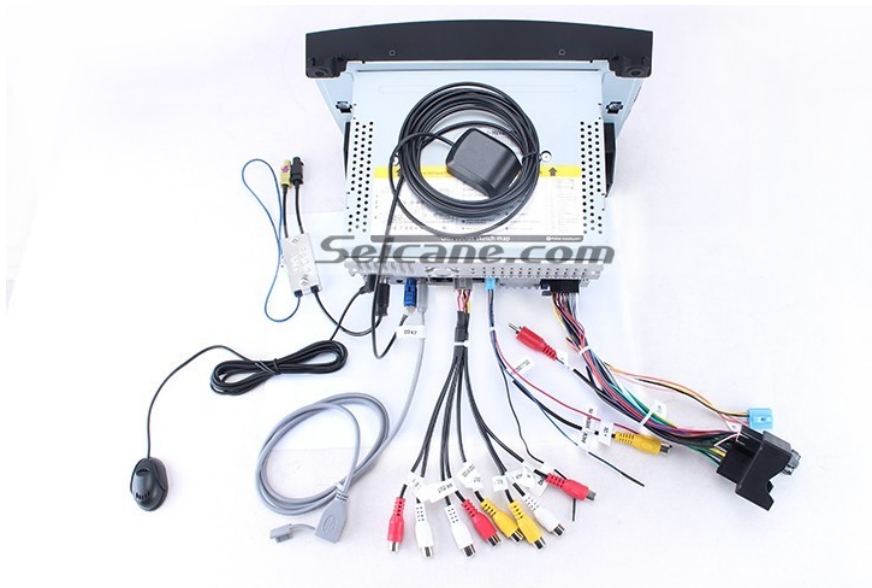

23. Connect the Seicane head unit to your original car radio 's plugs.

24. Put the new Seicane unit into the dashboard and turn it on to have a comprehensive check.

25. If everything works well, then install all the screws, boxes and trim panels accordingly into their original places. If not, check carefully whether all the cables are connected or not.

Please note:

We suggest you arrange a professional to install it. If you have any questions about installation, please send us photos about your original car's plugs, we can make a wiring diagram for your car.